



How to measure for a replacement window

Assure that the rough opening is at least $\frac{1}{4}$ " larger on the width, and on the height than the exact size of the retrofit window.

WIDTH

To measure width, raise the lower sash and measure the jamb-to-jamb width in three places: near the top of the window, at the middle and close to the bottom.

Measure from the surface of the jambs and not the trim or the parting strips in your old window opening. Use the **SMALLEST** of the measurements to order your replacement windows.

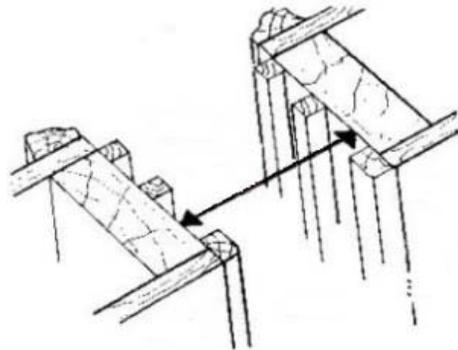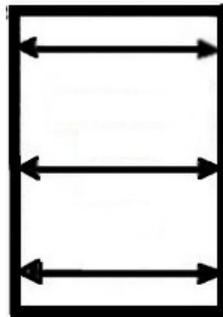

HEIGHT

Measure from the high point of the sill of your window to the top of your window opening. Take 2 measurements: one at the left side of the opening and one at the right side of the opening. Use the **SMALLEST** of the measurements to order your replacement window.

